



www.diakom.ru

IBM ← X1		PRINTER X2	
CERX	1	CON	CERX
STROB	2	STROB	1
D0	3	D0	2
D1	4	D1	3
D2	5	D2	4
D3	6	D3	5
D4	7	D4	6
D5	8	D5	7
D6	9	D6	8
D7	10	D7	9
ACKMLG	11	ACKMLG	10
BUSY	12	BUSY	11
PE	13	PE	12
SLCT	14	SLCT	13
AUTOFD	15	AUTOFD	14
INIT	16	INIT	15
ERROR	17	ERROR	16
SLC TIN	18	SLC TIN	17
GND	19	GND	18
GND	20	GND	19
GND	21	GND	20
GND	22	GND	21
GND	23	GND	22
GND	24	GND	23
GND	25	GND	24
		GND	25